

Maintenance

Maintenance Schedule

For use with Maintenance Alert System. Check at the intervals listed in the following chart.



WARNING

To avoid SERIOUS personal INJURY or DEATH:

- Disconnect electric power BEFORE performing ANY adjustments or maintenance.
- ALL maintenance MUST be performed by a trained door systems technician.

Item	Procedure	Every Month	Every 3 Months or 5,000 Cycles	Every 6 Months or 10,000 Cycles
Drive Chain	• Check for excessive slack. • Check and adjust as required. • Lubricate.		●●	
Sprockets	Check set screw tightness.		●	
Fasteners	Check and tighten as required.			●
Manual Hoist (if applicable)	Check and operate.			●
Shafts	Check for wear and lubricate.		●●	
LiftMaster Monitored Entrapment Protection	Check alignment and functionality.	●		

- Use SAE 30 Oil (Never use grease or silicone spray)
- Do not lubricate motor. Motor bearings are rated for continuous operation.

- Inspect and service whenever a malfunction is observed or suspected.

How to order repair parts: LiftMaster.com